

Genesis Centauri Dive Computer

The Centauri has 4 buttons -

1. The left side upper button is for Power and Exit.
2. The right side upper button is to move up on the screen.
3. The right side middle button is to select the option.
4. The right side lower button is to move down on the screen.

If your computer is powered off, please press and hold left side upper button for three seconds to turn the computer on.

When the computer powers up you will see the Genesis brand name, then the current version information and then the home screen. **While underwater back light will be constant ON.**

The home screen shows the battery level, day of the week, time of day and date.

In order to customize the setup of your Centauri follow these steps:

Menu -

Press the right side center button to access the Menu.

The arrow to the left of the Menu options indicates the option which can be selected.

With the arrow to the left of Watch, press the left center button to return to the watch home screen.

Or Press the left side button to return to the home screen.

Press the lower right button to move the arrow to Scuba.

Press the right center button to enter the Scuba mode.

Press the left upper button to exit the Scuba mode.

Press the right lower button to move the arrow to Gauge.

Press the right center button to enter the Gauge mode.

Press the left upper button to exit the Gauge mode.

Press the right lower button to move the arrow to Free.

Press the right center button to enter the Free Dive mode.

Press the left upper button to exit the Free Dive mode.

Press the right lower button to move the arrow to Log.

Press the right center button to enter the Log.

Press the left upper button to exit the Log.

NOTE: While underwater, during Scuba, Gauge and Free Diving modes, it is not necessary to press any of the buttons on your Genesis Centauri Dive Computer. The screen will be locked for the duration of the dive.

Press the left lower button to move the arrow to Setting.

Press the left center button to enter the Settings.

Settings -

Press the right side lower left button to move the arrow to Date.

Press the right side center button to enter the Date.

In this example, at the bottom of the screen the month number starts blinking.

Press the right side upper or lower buttons to enter the correct month number.

Press the right side center button to move to the day of the month.

Press the right side upper or lower buttons to enter the correct day of the month.

Press the right side center button to move to the year.

Press the right side upper or lower buttons to enter the correct year.

Press the right side center button to set the date.

Press the right side lower button to move the arrow to Format.

Press the right center button to enter Format.

In this example, At the bottom of the screen MMDDYY starts blinking.

Press the right side upper or lower buttons to select DDMMYY or YYMMDD to select your preference.

Press the right side center button to set the date Format.

Press the right side lower button to move the arrow to Time.

Press the right side center button to enter Time.

In this example, at the bottom of the screen hour starts blinking.

Press the right side upper or lower button to select the hour.

Note: The time is shown in 24-hour time.

Press the right side center button to set the hour.

Press the right side upper or lower buttons to select the minute.

Press the right side center button to set the time.

Press the right side lower button to move the arrow to UTC (Coordinated Universal Time).

Press the right side center button to enter UTC.

In this example, since we are in the eastern time zone of the USA, I set to +6.

Press the right side center button to set the UTC.

Press the right side lower button to move the arrow to 12h/24h.

Press the right side center button to enter 12h/24h.

Press the right side upper or lower button to select 12 or 24 hour.

Press the right side center button to set 12h or 24h.

Press the right side lower button to move the arrow to Auto Mode.

Press the right side center button to enter the Auto Mode.

Auto Mode is the Dive mode setting you prefer to have set which automatically starts when the computer senses and determines you have begun a dive.

In this example, at the bottom of the screen Scuba starts blinking.

Press the right side upper or lower button to select Scuba, Gauge or Free.

Press the right side center button to set your auto dive mode.

Press the right side lower button to move the arrow to Language.

Press the right side center button to enter Language.

In this example, at the bottom on the screen ENG starts blinking.

Press the right side upper and lower button to select language.

Press the right side center button to set language.

Press the right side lower button to move the arrow to Nitrox.

Press the right side center button to enter Nitrox.

The first digit in the number displayed at the bottom of the screen starts blinking.

Press the right side upper and lower buttons to select the first digit.

Press the right side center button to set the first digit.

Press the right side upper or lower button to select the second digit.

Press the right side center button to set the second digit.

Press the right side lower button to move the arrow to PPO2.

Press the right side center button to enter PPO2.

Press the right side upper or lower buttons to select the PPO2 setting.

Press the right side center button to set the PPO2.

Press the right side lower button to move the arrow to CF (Conservative Factor).

Press the right side center button to enter CF.

The CF at the bottom of the screen starts blinking.

Press the right side upper or lower buttons to select CF level.

Press the right side center button to set the CF.

Press the right side lower button to move the arrow to S-DPTH-ALM.

Press the right side center button to enter the S-DPTH-ALM.

Press the right side upper or lower buttons to select On or Off.

Press the right side center button to set S-DPTH-ALM.

Press the right side lower button to move the arrow to S-TIME-ALM.

Press the right side center button to enter S-TIME-ALM.

Press the right side upper and lower button to select On or Off.

Press the right side center button to set S-TIME-ALM.

Press the right side lower button to move the arrow to S-MAXDEPTH.

Press the right side center button to enter S-MAXDEPTH.

Press the right side upper and lower buttons to adjust the number.

Press the right side center button to set the –S-MAXDEPTH.

Press the right side lower button to move the arrow to S-MAXTIME.

Press the right side center button to enter the S-MAXTIME.

Press the right side upper or lower buttons to adjust the time.

Press the right side center button to set S-MAXTIME.

Press the right side lower button to move arrow to Sampling.

Press the right side center button to enter Sampling.

The number at the bottom of the screen starts blinking.

Press the right side upper or lower buttons to select the Sampling rate per second.

Press the right side center button to set the Sampling.

Press the right side lower button to move to Display.

Press the right side center button to enter Display.

Press the right side upper or lower button to select Normal or Large.

Press the right side center button to set Display.

Press the right side lower button to move the arrow to F-TIME-ALM.

Press the right side center button to enter F-TIME-ALM.

Press the right side upper or lower buttons to select On or Off.

Press the right side center button to set F-TIME-ALM.

Press the right side lower button to move the arrow to F-DEPTH-ALM.

Press the right side center button to enter the F-DEPTH-ALM.

Press the right side upper or lower buttons to select On or Off.

Press the right side center button to set the F-DEPTH-ALM.

Press the right side lower button to move the arrow to F-SI-ALM

Press the right side center button to enter the F-SI-ALM.

Press the right side upper or lower to select On or Off.

Press the right side center button to set the F-SI-ALM.

Press the right side lower button to move arrow to FREE-MAXT1.

Press the right side center button to enter FREE-MAXT1.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select time.

Press the right side center button to set FREE-MAXT1.

Press the right side lower button to move arrow to FREE-MAXT2.

Press the right side center button to enter FREE-MAXT2.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select time.

Press the right side center button to set FREE-MAXT2.

Press the right side lower button to move arrow to FREE-MAXT3.

Press the right side center button to enter FREE-MAXT3.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select time.

Press the right side center button to set FREE-MAXT3.

Press the right side lower button to move arrow to FREE-MAXD1.

Press the right side center button to enter FREE-MAXD1.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select depth.

Press the right side center button to set FREE-MAXD1.

Press the right side lower button to move arrow to FREE-MAXD2.

Press the right side center button to enter FREE-MAXD2.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select depth.

Press the right side center button to set FREE-MAXD2.

Press the right side lower button to move arrow to FREE-MAXD3.

Press the right side center button to enter FREE-MAXD3.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select depth.

Press the right side center button to set FREE-MAXD3.

Press the right side lower button to move arrow to FREE-SI-T1.

Press the right side center button to enter FREE-SI-T1.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select time.

Press the right side center button to set FREE-SI-T1.

Press the right side lower button to move arrow to FREE-SI-T2.

Press the right side center button to enter FREE-SI-T2.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select time.

Press the right side center button to set FREE-SI-T2.

Press the right side lower button to move arrow to FREE-SI-T3.

Press the right side center button to enter FREE-SI-T3.

The number at the bottom of the screen starts flashing.

Press the right side upper or lower buttons to select time.

Press the right side center button to set FREE-SI-T3.

Press the right side lower left button to move to arrow to Unit.

Press the right side upper or lower button to select FT/F (feet/Fahrenheit) or M/C (Meters/Celsius).

Press the right side center button to set the units.

Press the right side lower button to move the arrow to Power.

Press the right side center button to enter Power.

The minute number in the bottom of the screen starts blinking.

Press the upper or lower button to select the Power minute.

Press the right side center button to set the Power minute.

Press the right side lower button to move the arrow to Buzzer.

Press the right side center button to enter Buzzer.

The On/Off in the bottom of the screen starts blinking.

Press the right side upper or lower buttons to select On or Off.

Press the right side center button to set Buzzer.

Press the right side lower button to move arrow to Backlight.

Press the right side center button to enter Backlight.

The backlight brightness number in the bottom of the screen starts to blink.

Press the right side upper or lower buttons to select the Backlight brightness.

Press the right side center button to set the Backlight.

Press the right side lower button to move the arrow to Vibration.

Press the right side center button to enter Vibration.

The On/Off starts blinking.

Press the right side upper or lower button to select On or Off.

Press the right side center button to set Vibration.

Press the right side lower button to move arrow to Exit

Press the right side center button or upper left button to return to the Menu screen

Press the right side upper or lower button to move the arrow to Watch.

Press the right side center button to return to the home screen.

Or press the left side upper button to return to the home screen.

Settings – Quick Access

From the home screen, press the right side upper button to quickly access Date, Format, Time, UTC, 12H/24H, Auto Mode and Language.

Press left side upper button to return to the home screen.

Last Dive –

From the home screen, press the right side lower button once.

Scuba History –

From the home screen, press the right side lower button twice.

Free Dive History –

From the home screen, press the right side lower button three times.

Version –

From the home screen, press the right side lower button four times.

To return to home screen, press the right side lower button once or press the left side upper button.

Genesis Scuba V1.1 2020.08.26